

Equipment Controls

Power Button
Switches the power on/off for the currently selected device
Switches STB to power on or standby mode

STB Button
This button is pre-programmed to control the Entone device

TV Button
Select to control TV (if programmed)

Input Button
Changes the current AV input of the selected device programmed (i.e. TV or AUX)
May be used when entering a period in certain channels
Displays on-screen keyboard for certain applications

AUX Button
Select to control another device (if programmed)

DVR Controls

Rewind Button
Rewinds video

Replay Button
Goes back approx. 7 seconds

Pause Button
Pauses video

Stop Button
Stops playback of video

Controls video program for LIVE TV / DVR / VOD

Forward Button
Fast forwards video

Skip Button
Advances ahead in 30 second increments

Play Button
Plays video or resumes a paused program

Record Button
Starts or stops recording a program

Navigation Controls

Options Button
Provides additional options for certain on-screen menu or highlighted*

Back Button
Goes back one level within menus*

Menu Button
Displays on-screen menu or home screen

Exit Button
Exits the current menu item or back to LIVE TV

Volume +/-
Increases or decreases volume of the currently selected device

Mute Button
Toggle audio on or off

Number Keys
Allows direct access to specific channels and menu items

Info Button
Displays on-screen information about the current TV / VOD / DVR program

Navigation Button
Arrow Keys: Navigates up, down, left and right within the on-screen guide or menu
OK: Executes the currently selected menu option

Guide Button
Press to cycle through the on-screen guide and favorites lists

Channel/Page Button
Changes channel up/down or pages up/down within the on-screen program guide

Last Button
Press to change to previously tuned channel

Closed Caption Button
Press to enable/disable

Turning Television ON/OFF

1. Press **(TV)** to set remote to control your television.
2. Press **(Power)** to turn ON/OFF your television.

Changing Cable Channels

1. Press **(STB)** to set remote to change cable channels.

PROGRAMMING YOUR REMOTE *Auto Search Procedure*

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

- Turn on your television.
- On the remote control, PRESS the corresponding **Device Control** key (i.e., **TV / DVD / AUX**) to choose the device mode.
- PRESS and hold **SETUP** key until the LED blinks twice.
- PRESS number keys **9 - 9 - 1**.
- PRESS **POWER** key.
- PRESS **CH +** key repeatedly until your device turns off.
- PRESS and hold **SETUP** key until LED blinks twice to save the working code.

TROUBLESHOOTING

MISSING CHANNELS: PRESS Guide and check if display is set to “Subscribed” or “Favorites” list. To display “All” or “Subscribed” channels, PRESS Guide button repeatedly until the tab at the top of the Guide displays “All” or “Subscribed”.

Channel Blocking will not display channels in the Guide. To edit your Channel Blocking settings, see Channel Blocking in your PSCtv User Guide.

Parental Controls can also prevent channels from being displayed. To edit your Parental Control settings, see Parental Controls in your PSCtv User Guide.

PROBLEM	SOLUTION
The LED does not blink when a key is pressed	Replace the batteries with two (2) new AA batteries
LED blinks when key is pressed but TV or STB does not respond	Make sure you are aiming the remote control at your device and that you are within 25 feet of the device you are trying to control
The remote control does not control TV functions	Follow “Controlling your devices” on page 5 of your NOVA Remote Control Guide to program the remote to control your TV
The LED blinks 5 times with each key press	The batteries need replacement. Replace the batteries.

.....
 In order to make any system changes or purchase from Pay-Per-View/Video-on-Demand services, a password or PIN is required. **The default password and PIN is set to 0 (zero).**

To change your password and/or PIN, please reference the Settings, Editing a User Account section of the new PSCtv User Guide.